


### Distance gauge

Open the mounting instructions and pull out the red gauge completely. Position the black tip of the gauge on the mounted cap **A2** (Pic. A). Push the unfolded instruction towards the tire until the red edges touch the tire on both sides. While doing, the red slide is being pushed back slowly. Now you may read the measured distance. If the arrow is very close to or even on the black line which separates the distance

fields, chose the higher distance indication. Please select only the needed spacing components combination that corresponds with the distance figure (Pic. B). The remaining screws are not needed. Continue with **step 3** afterwards.



**B** Possible combination of spacing components and distance values

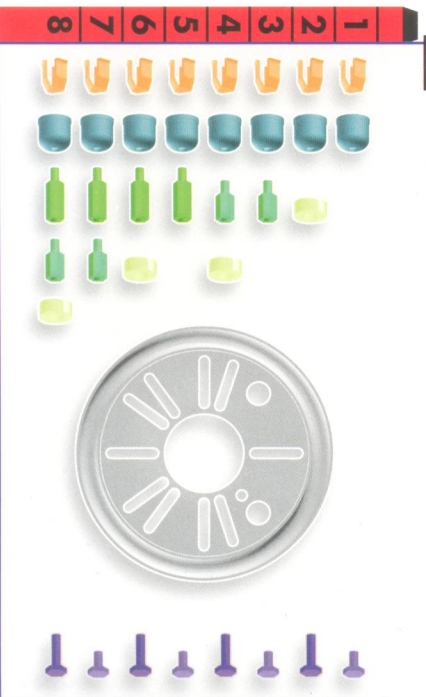

### A

### Special case

If the red edges of the mounting instruction do not touch the tire because the rim extends beyond the outer sidewall of the tire, the adapter may be mounted as long

as the distance between red edge of the mounting instruction and the tire is not more than 10mm. If this is guaranteed, proceed with **step 3**.

